

MOUNTING INSTRUCTIONS

KIT WINDSHIELD
YAMAHA MT-09 '17

YMT9300-17


WWW.BARRACUDAMOTO.COM

MOUNTING PROCEDURE:

- APPROACH THE SPECIFIC BRACKETS NEAR THE HIGHLIGHTINING POINTS AND LOCK WITH ORIGINAL SCREWS;
- PUT ALL IN POSITIONN LIKE THE ILLUSTRATED SCHEME;
- FIND THE RIGHT POSITION OF SCREEN ON THE ALREADY FIXED BRACKET AND PROCEED TO LOCK ALL THE SCREWS

KIT

X1. PLEXIGLASS
X2. SPECIFIC BRACKET
X4. SPECIAL WASHER
X4. SCRE "ROUND HEAD" 5X12
X4. TEFLON WASHER Ø 5
X6. RUBBER WASHER

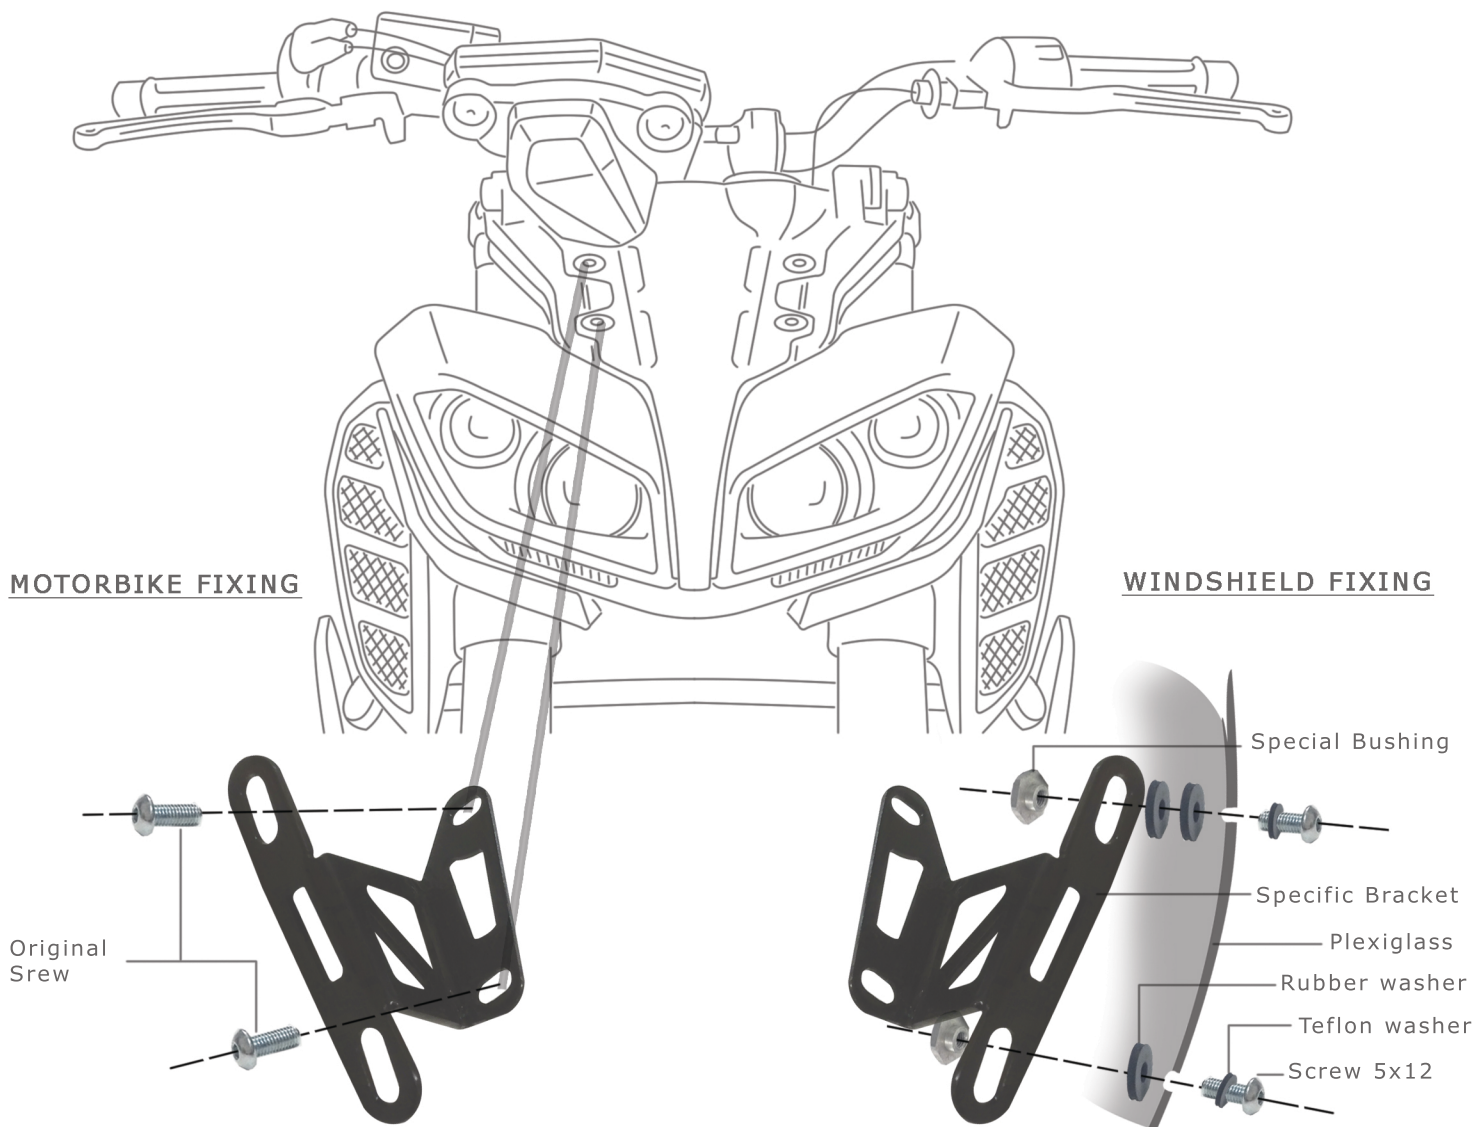

NOTE: NOT LOCK TOO MUCH TO AVOID DAMAGE TO THE PLEXIGLASS